



## HD wifi security camera

### Quick Start Guide

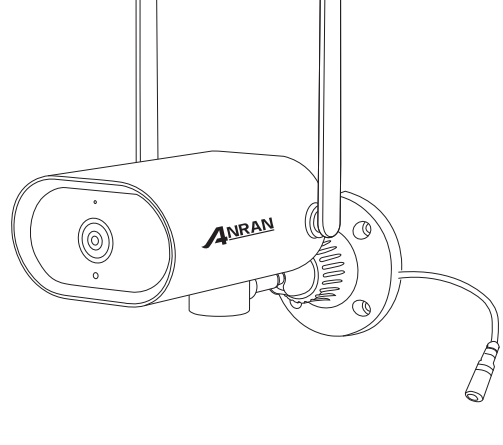

www.anran-cctv.com / support@anran-cctv.com

#### Product overview

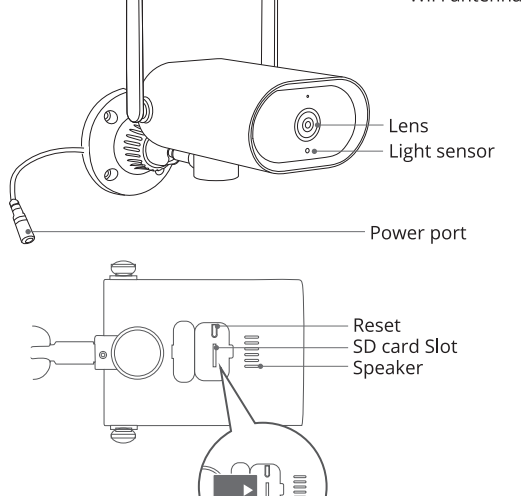

**CAUTION:** Please insert the Micro SD Card according to the direction shown in the diagram. Micro SD Card might JAM if inserted incorrectly and device could be damaged.

**SD Card Port:** Support micro SD card for local storage (Max 128GB).

**Reset button:** Used to restore the camera to factory settings (Press and hold on 5-8s).

— 01 —

#### ARCCTV App installation and Setup

- from Google Play
- from Apple Store
- or Scan the following QR code



iOS




Android

— 02 —

#### Mounting the camera


##### Select Height and location

Hang anranCam 7-10 ft (2-3 m) above the ground. This height maximizes the detection range of the motion detection of anranCam. Avoid placing anranCam under direct sunlight.

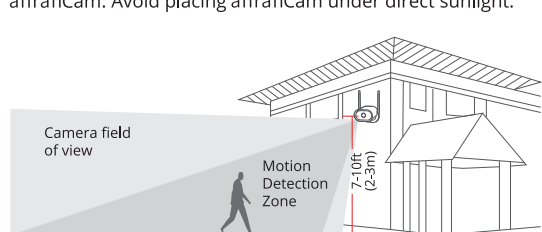

##### Make sure of the reserving wire length


Reserve 10cm of end wire, fix the bottom base, avoid wire damage when camera turns.

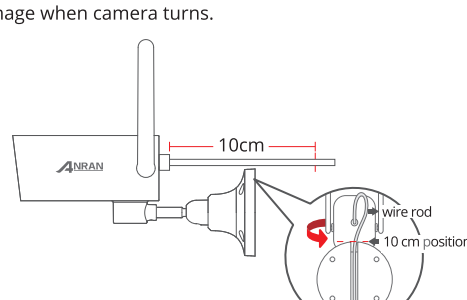

— 03 —

##### Test the Wifi signal at installation position


Use cell phone to test Wifi signal quality at the installation position before installing camera, make sure the Wifi router can provide good Wifi signal.

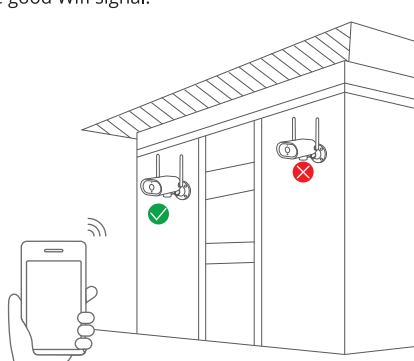

— 04 —


#### Register an account

1. Open the "ARCCTV" APP to register an account. Go to the login interface then click "Register" (Figure 1)
2. Register with your phone number or email address, click "Confirm", a verification code will be sent to your phone or email-box (Figure 2)
3. Input the verification code and set a password for the app account, click "Confirm" to complete (Figure 3)

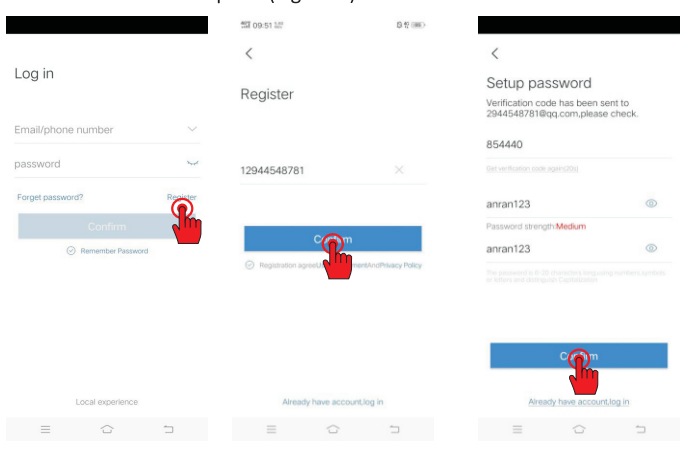


— 05 —

- Step4:** Click "Remote View", find your home WiFi and input the WiFi password, click "CONFIRM". Please wait until you hear a voice message "Wireless Connection Successfully", which means the camera is connected success to your home WiFi

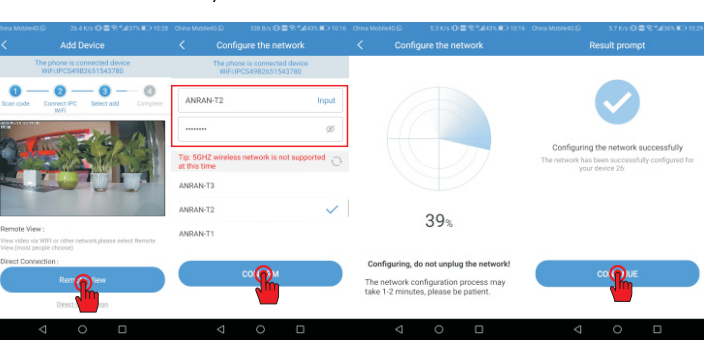

- Step5:** Name the device and set a password to complete the setup.

**Tip:** The camera password should be 6 to 10 digits, no special characters

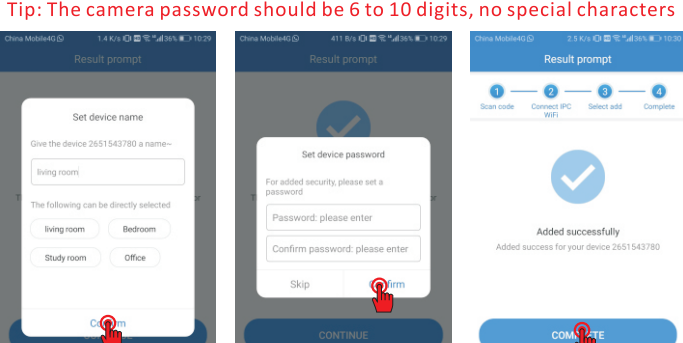

— 07 —

#### Device Storage

The NVR camera supports up to 128GB Micro TF card. Please format the card after inserted.


When the Card is full, it will overwrite and loop recording.



— 08 —


#### Remote Playback

- 1) Click the "Playback" button to enter the playback interface;
- 2) Select "TF card recording", drag the timeline to select the time period;
- 3) Click " " to select the date.

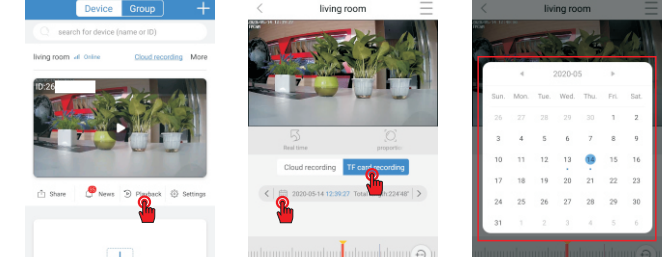


#### Motion detection alarm

With the function on, the App will push an alarm message to you when a motion is triggered. Click "Settings" and choose "Motion Detection recording", turn on the "Motion detection", "Motion Recording" and "Enable motion detection notifications"

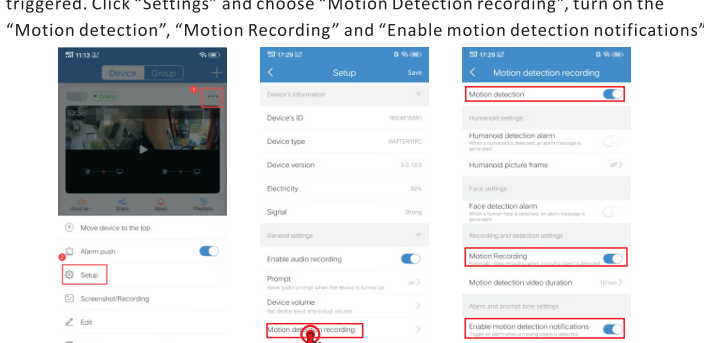

— 09 —

#### Functions

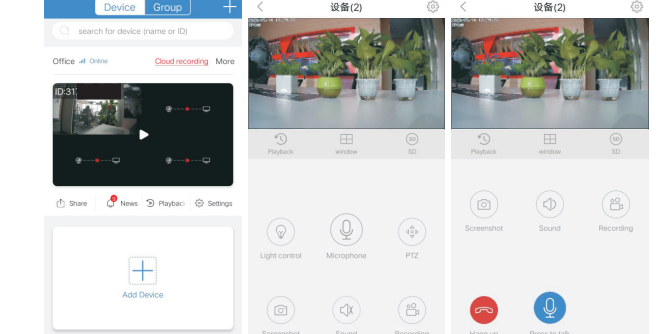

**News:** Tap to view alarm messages. Please go to Me > Settings to turn on the Push Notification.

**Playback:** Tap to view the videos recorded.

**Window:** Change the number of channels displayed on the screen.

**SD:** Switch the image quality between SD and HD. SD is the default setting and recommended for the smooth streaming.

**Light control:** Adjust the infrared lights mode of cameras.

**Microphone:** Can press and hold Microphone to start the intercom.

**PTZ:** Can Pan and Zoom the cameras came with this system.

— 10 —

#### FAQ

**Q:** The device cannot be previewed properly.  
**A:** Check whether the network is normal, you can place the camera close to the router, and if not, it is recommended to reset the device and add it again.

**Q:** Why is it still in the list of devices after resetting?  
**A:** The reset device only resets the network configuration of the camera, but cannot change the configuration on the App, remove the camera, and must be deleted by the App.

**Q:** How to cut the camera network to another router?  
**A:** First remove and reset the device on the App and then configure the device again by the App.

**Q:** Why doesn't the device identify the SD card?  
**A:** It is recommended to plug in SD card after power cut. Confirm whether the SD card is normally available and the format is FAT32. And the TF card can't be identified when the internet environment is not good.

**Q:** Why I can't get the notifications with my cell phone App?  
**A:** Please confirm that the App has been running on the phone, and the relevant reminder function has been opened; Message notification and authority confirmation in the mobile phone system have been opened.

— 12 —

#### Contact us

www.anran-cctv.com

support@anran-cctv.com